



Knowledge grows

Yara N-Tester BT



Karbis sisaldub

N-Tester BT

LED indikaator

Pöidla ala

Sisse-ja
väljalülitamise
nupp

Lehe piiraja

Testimise
indikaator

Mõõtepea

Lääts

Patarei pesa

Kasutusjuhend



Patareid



2x AA (LR06)
patareid on
seadmes olemas

Käepael



kasuta, kui on
vajadus

Kasutusjuhend N-Tester BT kasutamiseks Atfarmi mobiilirakendusega

SAMM 1

Installi Atfarmi mobiilirakendus

Installi rakendusest:
Google Play Store



Installi rakendusest:
Apple App Store



SAMM 2

Kasuta Atfarmi mobiilirakendust

1. Logi sisse oma emaili ja Atfarm'i parooliga.
2. Loo uus ettevõtte või kasuta olemasolevat.
3. Leia rakenduses alla kerides N-Tester BT mõõtmise valik ja alusta.
4. Järgi mobiilirakenduses antavaid juhiseid.

SAMM 3

Lülita N-Tester BT sisse

- Hoia paar sekundit all sisse- ja väljalülitusnupp.

Nõuanne

Punane vilkuv tuli näitab, et patareid tuleb vahetada.

Atfarmi mobiilirakendus ühildub seadmega automaatselt.

Mõndadel juhtudel ilmub ekraanile bluetoothiga ühendumise aken, ärge ühendage seadet bluetoothiga selle kaudu.


SAMM 4

Kui ühendamine õnnestus, siis sinine LED tuluke jääb põlema. Jätka tegutsemist mobiilirakenduses.



SAMM 6

Pane leht mõõtepea vahele, kasutades seadmel olevat keskjoont piirina. Leht peab täielikult katma läätse mõõteala.

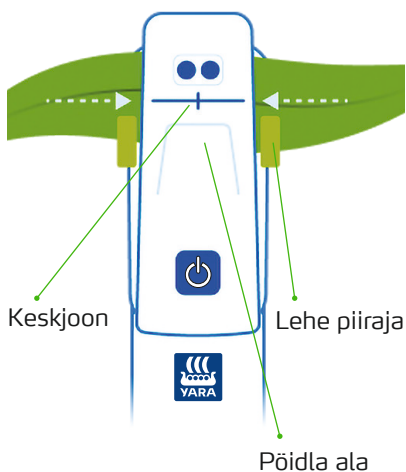

Vajuta mõõtepeale oma põidlagi. Hoia nuppu all seni, kuni LED tuluke vilgub. Teade ilmub ka telefoni.

Nõuanne

Kui vajalik, siis kasuta lehe piirajat selleks, et leht mahutuks seadme vahele.

Ebaõnnestunud mõõtmine kuvatakse punase LED tulega või teavitusega mobiilirakenduses. Kui nii juhtub, korda mõõtmisi.

SAMM 7

- Korda mõõtmisi nii palju kordi, kui on rakenduses kuvatud.

Nõuanne

Nõuanne: Selleks, et saada täpsemaid tulemusi, liigu põllul W mustriga.



- Soovitus kuvatakse Atfarmi mobiilirakenduses.
- Kui oled lõpetanud, lülita seade välja.

Spetsifikatsioon ja kontaktid

Kasutamistingimused

Temperatuurivahemik: 0-55 °C
Niiskussvahemik: ≤ 85 %
Kõrgus: ≤ 2000 m
Töökoht: väljas
Saasteklass: 2 (vastavalt IEC 61010-1 määratlusele)
Kaitse seadet vihma ja vedelikega kokkupuute eest.

Patareid

N-Tester BT töötab kahe AA (LR 06) patareiga.
Selleks, et vahetada patareisid, ava kruvikeerajaga patarei pesa.
Patareid, mis on eemaldatud, tuleb viia patareide kogumispunkti.
Patareisid ei tohi visata olmeprügisse.

Puhastamine

Puhasta N-Tester BT niiske lapiga.
Ära kasuta kemikaale ega pese seadet jooksva vee all.
Käi hoolikalt ümber läätsega, mis on sisse ehitatud mõõteseadme ülemises osas. Kui vajalik, siis puhasta läätse kuiva, puhta ja pehme lapiga.

Taaskasutus



Vana N-Tester BT tuleb tagastada tagastusaadressile. Märge seadmel ütleb, et seda ei tohi visata olmeprügisse.

Informatsioon



See toode on vastavuses EU direktiividega. EL vastavusdeklaratsioon on kättesaadav klienditoe käest.

VAJATE ABI?



Kui sul on lisaküsimusi, palun võta meiega ühendust.

Kontaktandmed on leitavad kasutusjuhendi tagaküljelt.

The following text is in English for legal reasons.

List of the used Open-source Components

The listed Open-source software (OSS) components are used within the device under the terms of the respective licenses. The source code corresponding to the Open-source software components is also provided along with the product wherever mandated by the respective OSS license.

Included OOS components: STM32Cube generated files, STM32 Examples

License	Copyright
BSD 3-Clause license https://opensource.org/licenses/BSD-3-Clause	Copyright (c) 2012-2020 STMicroelectronics
Apache License, Version 2.0 https://opensource.org/licenses/Apache-2.0	Copyright (c) 2012-2020 STMicroelectronics Copyright (c) 2009-2019 Arm Limited
Ultimate Liberty license https://www.st.com/SLA0044	Copyright (c) 2012-2020 STMicroelectronics
MCD-ST Liberty SW License Agreement V2 https://www.st.com/software_license_agreement_liberty_v2	Copyright (c) 2012-2020 STMicroelectronics

COPYRIGHT(c) 2012-2020 STMicroelectronics

Redistribution and use in source and binary forms, with or without modification, are permitted provided that the following conditions are met:

1. Redistributions of source code must retain the above copyright notice, this list of conditions and the following disclaimer.
2. Redistributions in binary form must reproduce the above copyright notice, this list of conditions and the following disclaimer in the documentation and/or other materials provided with the distribution.
3. Neither the name of STMicroelectronics nor the names of its contributors may be used to endorse or promote products derived from this software without specific prior written permission.

THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDER OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.



Knowledge grows



Help & Updates

support@at.farm
<https://support.at.farm/>



Returns:

Yara International ASA
c/o Openstore24 (swiss mail
solution)
Eichenstrasse 1a
3385 Gerersdorf
Austria



Yara International ASA
Drammensveien 131
0277 Oslo
Norway